



**1** Take the provided power adapter. Plug one end into **P2P GEAR PRO**'s DC power port and the other end into a power outlet. **P2P GEAR PRO** will enter the working mode as soon as its POWER LED light is constantly on.

**2** Take an Ethernet cable. Plug one end of the cable into your computer's network port and the other end into one of **P2P GEAR PRO**'s LAN ports.


**3** Take another Ethernet cable. Plug one end of the cable into one of your modem's LAN ports and the other end into **P2P GEAR PRO**'s WAN port.

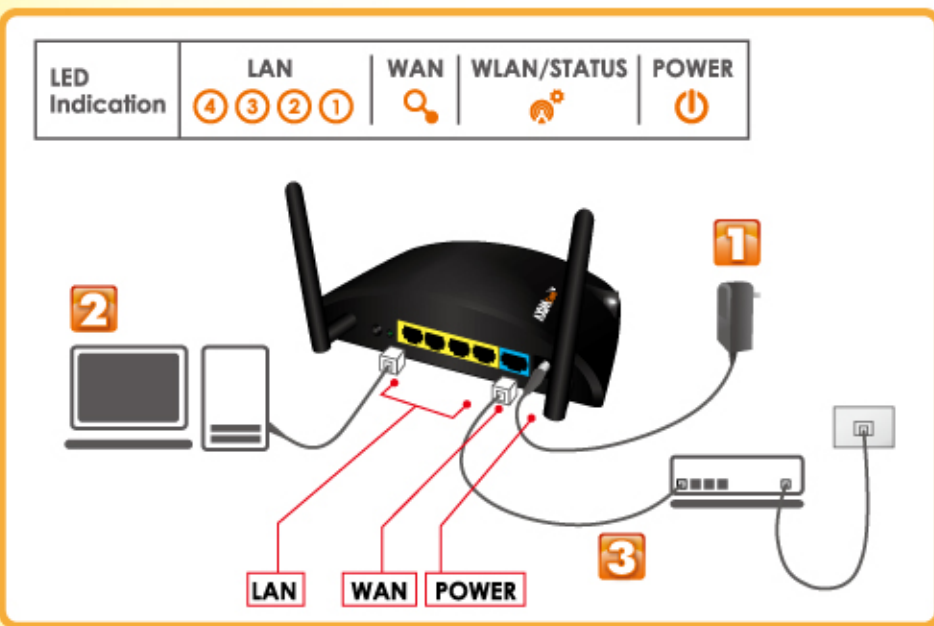

**4** Make sure your computer's IP address service type is "DHCP." Select "Obtain an IP address automatically" and "Obtain DNS server address automatically." **P2P GEAR PRO** will automatically assign an IP address to your computer.

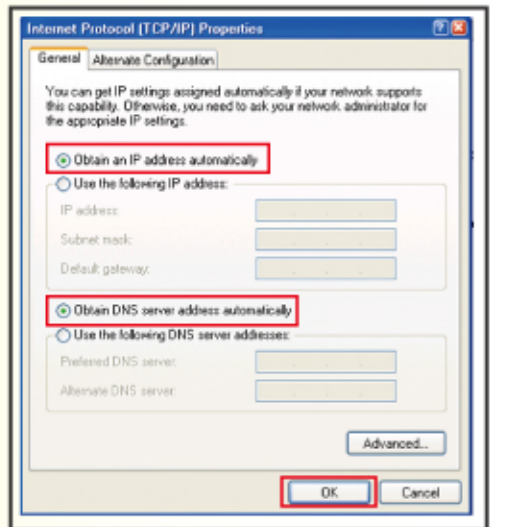

 **5** Open a web browser (e.g. IE, Firefox) and enter [http://192.168.1.1:8080] in the address box. A dialog window will pop up asking for the user name and password. Enter the default user name [admin] and password [admin]. You will see the start page of **P2P GEAR PRO**.





**6** Click on [Setup] – [WAN] to configure your Internet connection. Select connection type subscribed from your ISP [DHCP, Static IP, PPPoE] and enter relevant information.

**DHCP (automatic IP address assignment):**  
The WAN IP address is automatically assigned by your ISP's DHCP server.


**Static IP (fixed IP address assignment):**  
Please enter the IP address, subnet mask, gateway and DNS server provided by your ISP.

**PPPoE (connected by user name and password):**  
Please enter the user name and password provided by your ISP.

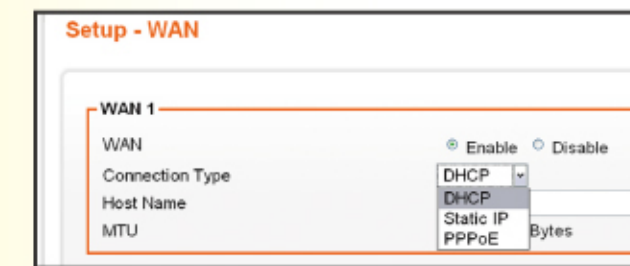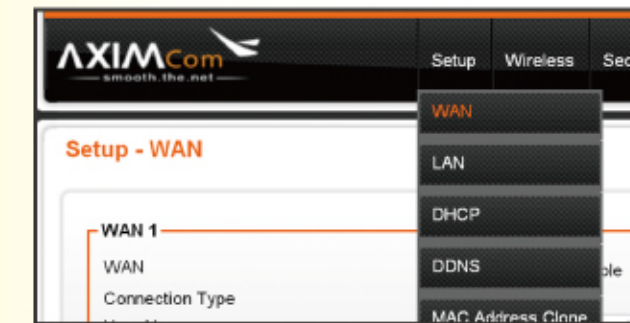

**7** Click on [iDBM / Access Control] – [iDBM] to configure the Intelligent Bandwidth Management function. Select the correct download / upload bandwidth provided by your ISP. If you cannot find the correct values, select [custom] and enter the correct values. **P2P GEAR PRO** will start to optimize your bandwidth usage and provide good network quality to all users / applications.

**Note: Please Do enter the correct values of your download/upload bandwidth. Wrong values might result in poor bandwidth management performance.**

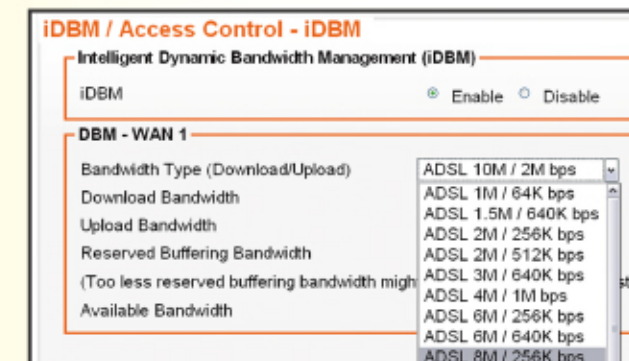

**8** Now you have got **P2P GEAR PRO** up and running! For advanced functions, please refer to our user manual enclosed in the CD. Enjoy stable and smooth broadband sharing!